BRAUN

Smart Control3

4835

Type 5745

www.braun.com/register

1
F/C4000
2
3
3
4
5
6
7
washable
start • stop
SmartControl3 360
BRAUN

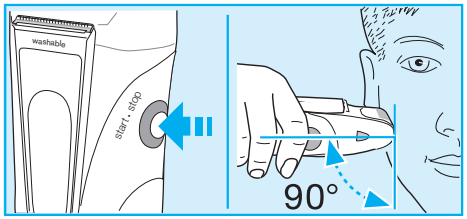
washable
start • stop
90°

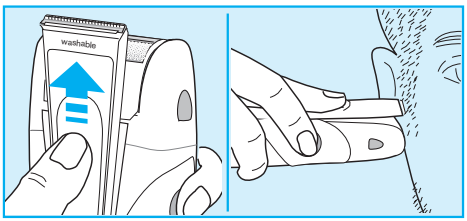
washable

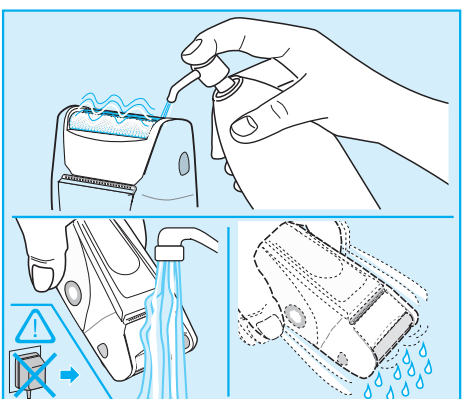

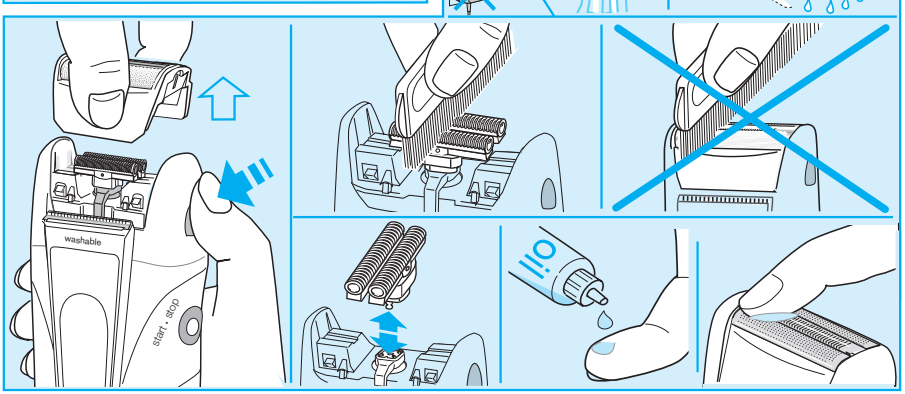
washable
start • stop

中文

本产品设计优异、功能完善、质量可靠。希望您对德国博朗牌剃须刀感到满意。

注意

本剃须刀提供的专用电源线带有特别的安全低电压转换器。请勿更换或改装转换器的任何部件，否则可能有触电危险。

组件说明

1 网膜
2 刀头
3 网膜松解按钮
4 On/off电源开关（启动/停止）
5 鬓发修剪器
6 充电指示灯（绿色）
7 专用电源线

充电

充电时的最佳环境温度范围是15°C至35°C。

- 将专用电源线连接剃须刀，另一头插入电源插座，此时电机必须处于关闭状态。让剃须刀充电至少8小时。
- 绿色充电指示灯(6)亮起，表明剃须刀处于充电状态。
- 剃须刀完全充电之后，断开电源线使用至电量耗尽。然后再次完全充电。
- 一次充满电量后在不接充电器的条件下，约可使用30分钟。使用时间依胡须状况有所差别。经过数次充放电循环以后，电池容量才能达到最大。

剃须

按下on/off电源开关(4)启动剃须刀。

鬓发修剪器:

启动鬓发修剪器(5)可修剪鬓发和络腮胡。

完美剃须的秘诀

- 由于皮肤在水洗后略微膨胀，建议您在洗脸之前剃须。
- 剃须刀与皮肤垂直(呈90°)。逆着胡须生长方向剃须。
- 为确保最佳剃须效果，建议至少每18个月、或视零件磨损程度及时更换网膜和刀头。

清洁

本款剃须刀可在水龙头下冲洗。
警示：在冲洗前务必拔下电源插头！

定期清洁可保证更好的剃须效果。每次剃须后将剃须刀前部置于流水下冲洗，是保持清洁的便捷方法:

- 在断开电源线状态下启动剃须刀，将其头部置于流动的温水下冲洗。也可使用不含颗粒和磨损性物质的天然液态肥皂。洗净所有泡沫后，让剃须刀继续运转几秒钟;
- 关闭电源，按网膜松解按钮卸下网膜，拔出刀头后风干所有部件。

此外，您也可使用所附的刷子进行清洁:

- 关闭剃须刀电源，按网膜松解按钮卸下网膜;
- 用刷子清洁刀头及刀架内部区域，但切勿用刷子清洁网膜，以免造成网膜破损。

保养剃须刀至最佳状态

约每四周左右用博朗清洁剂清洁刀头一次，并在鬓发修剪器和网膜上滴加少量轻机油。

电池保养

为了保持充电电池的最佳效果，剃须刀应该约每6个月完全放电一次（通过正常剃须放电），然后再次充满。不宜长时间将剃须刀暴露于温度高于50°C的环境中。

零件更换

为保持最佳剃须效果，请至少每18个月、或在出现磨损时更换网膜和刀头。为获得贴面剃须效果的同时较少皮肤刺激，两部分零件宜同时更换。
（剃须网膜和刀头：零件号4000）

注意环保

本产品采用可充电电池。为保护环境，在产品使用寿命结束后，请将其送至博朗特约维修站或适当的收集点进行处理，不要与家庭垃圾一起丢弃。

本说明可能在不作事先通知的情况下作出修改。

本产品符合欧洲EMC指令第89/336 /EEC，以及欧共体低压标准73/23 EEC。

CE

电气规格详见专用电源线标示。

English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun Shaver.

Warning
Your shaver is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is risk of electric shock.

Description

1 Shaver foil
2 Cutter block
3 Release button
4 On/off switch («start/stop»)
5 Long hair trimmer
6 Charging light (green)
7 Special cord set

Charging

The best environmental temperature for charging is between 15 °C and 35 °C.

- Connect the shaver to an electrical outlet with the motor switched off and charge it for at least 8 hours.
- The green charging light (6) shows that the shaver is being charged.
- Once the shaver is completely charged, discharge the shaver through normal use. Then recharge to full capacity.
- A full charge provides up to 30 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.

Shaving

Press the on/off switch (4) to turn the shaver on.

Trimmer:
When the long hair trimmer (5) is activated, it allows the controlled trimming of moustache or sideburns.

Tips for the perfect shave

- We recommend that you shave before washing, as the skin tends to be slightly swollen after washing.
- Hold the shaver at right angles (90°) to the skin. Stretch the skin and shave against the direction of beard growth.
- To maintain 100% shaving performance, replace the shaver foil and cutter block at least every 18 months or when worn.

Cleaning

This appliance is suitable for cleaning under an open water tap.
Warning: Detach the hand-held part from the power supply before cleaning it in water.

Regular cleaning ensures better shaving performance. Rinsing the shaving head after each shave under running water is an easy and fast way to keep it clean:

- Switch the shaver on (cordless) and rinse the shaving head under hot running water. A natural based soap may also be used provided it contains no particles or abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver and press the release buttons. Remove the shaver foil and the cutter block. Then leave the disassembled shaving parts to dry.

Alternatively, you may clean the shaver using the brush provided:

- Switch off the shaver. Remove the shaver foil.
- Using the brush, clean the cutter block and the inner area of the shaver head. However, do not clean the shaver foil with the brush as this may damage the foil.

Keeping your shaver in top shape

About every four weeks, clean the cutter block with Braun cleaning agents. Put a drop of light machine oil onto the long hair trimmer and the shaver foil.

Preserving the batteries
In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (by shaving) every 6 months approximately. Then recharge the shaver to full capacity. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

Replacing the shaving parts
To maintain 100% shaving performance replace your foil and cutter block at least every 18 months or when worn. Change both parts at the same time for a closer shave with less skin irritation.
(Shaver foil and cutter block: 4000 series)

Environmental notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.

Subject to change without notice.

This product conforms to the European Directives EMC 89/336/EEC and Low Voltage 73/23/EEC.

CE

For electric specifications, see printing on the special cord set.

5-745-455/01/I-07
China/GB